

Cording Foot

Item N°: A-D2-04A (5 mm) | A-D2-05A (2,5 mm) | A-D2-06A (2mm) | A-D2-07A (1,6 mm)

By using the cording inserts for the swing foot, the creative cover stitch gains a unique, three-dimensional decorative look, that can be used to adorn any sewing project. You can also sew cord without fabric to create versatile trims and cords for different purposes, for example to be used as straps.




Size Cording foot	Stitch	Needle position	Stitch length
5 mm/red	Swing- or Serpentine stitch, triple Swing- or Serpentine stitch, wide	C1+C2+C3 C1+C3	3 – 4 mm
2,5 mm/yellow	Swing- or Serpentine stitch, triple Swing- or Serpentine stitch, wide	C1+C2+C3	3 – 4 mm
2 mm/pink		C1+C3	3 – 4 mm
1,6 mm/light blue	Swing- or Serpentine stitch, narrow	C1+C2 or C2+C3	3 – 4 mm

HOW TO SET UP THE MACHINE

Release


1. Put the wiper positioning lever in the horizontal position (fig. A)
2. Raise the foot, press the needle positioning button until the needles are in the highest position and the swing foot wipers are is open.
3. Grasp the insert by the right and left tabs (marked red - B) and pull it off the foot (C).

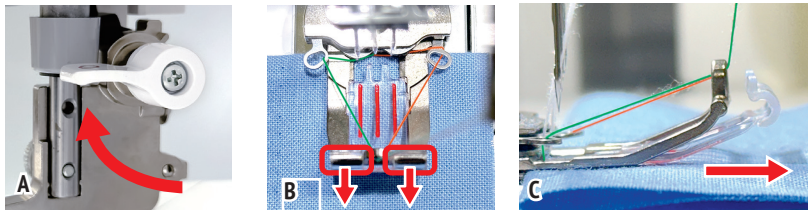

Threading the cord


Thread the cord through the front guide slot from below and through the rear guide slot from above. If necessary, use tweezers to pull the cords through both guide slots.

NOTE: If the selected cord splits/untwists, it may be necessary to tape the end to secure the cord so that it can be threaded through each guide slot more easily.

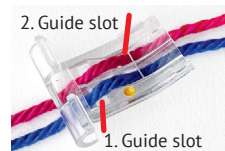

Attaching the cord insert

1. Place a test piece of fabric under the presser foot before attaching the insert.
2. Raise the presser foot and slide the insert onto the presser foot (A) until the insert clicks into place and sits flush against the main body of the foot. (B and C).
3. Place the cords through each of the guide slots in the insert and to the back (D). It may be easier to do this before attaching the insert onto the foot.
4. Lower the presser foot (E and F)
5. Sew on the test fabric and approx. 2.5 cm beyond it
6. Start sewing on the fabric (F)

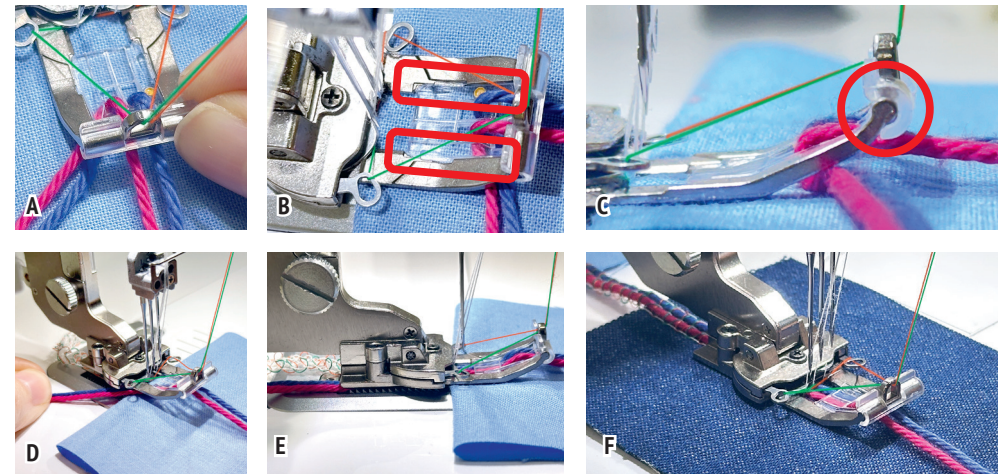

NOTE: If the insert is in the correct position (B+C), it will click into place. Otherwise you will feel some resistance. If this is the case, remove the insert and reinsert it. **Do not force the insert into position;** Verify that the insert is properly positioned by lifting the presser foot and ensuring it is aligned flush with the main body of the foot, rather than angled downwards.