


Set Stitch in the ditch

Item No: P-3 (Set) | A-D2-01A (center) | A-D2-02A (right) | A-D2-03A (left)


This insert can be used to decorate or reinforce edges that have already been overlapped, e.g. side seams, with creative cover stitches. The guide of the insert lies in the overlapped seam line during sewing, preventing messy or uneven sewing. The overlapped seam is concealed with the selected Creative Cover stitch.

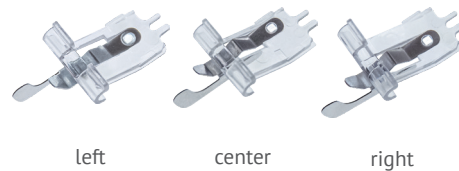

Foot	Stitch	Needle position	Stitch length
Stitch in ditch (center, left or right)	Swing- or Serpentine stitch, wide Swing- or Serpentine stitch, triple	C1 + C3 C1 + C2 + C3	3 – 4 mm
Stitch in ditch (left or right)	Swing- or Serpentine stitch, narrow Swing- or Serpentine chain stitch Swing- or Serpentine stitch, wide Swing- or Serpentine stitch, triple	C1 + C2 or C2 + C3 C1 or C2 or C3 C1 + C3 C1 + C2 + C3	3 – 4 mm


HOW TO SET UP THE MACHINE

1. Put the wiper positioning lever in the horizontal position (fig. A)
2. Raise the foot, press the needle positioning button until the needles are in the highest position and the swing foot wipers are open.
3. Grasp the insert by the right and left tabs (marked red - B) and pull it off the foot (C).

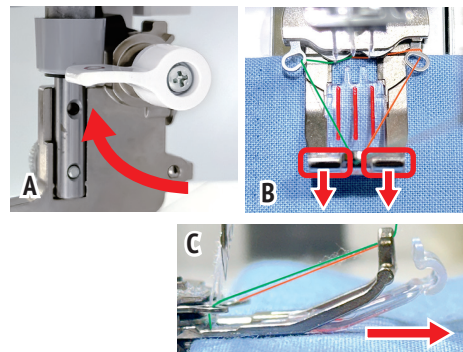

Attaching the stitch in the ditch


1. Raise the presser foot and slide the insert on to the presser foot (D) until the edges of the insert click into place (F) and sits flush on the foot (E)
2. Check that the insert is fitted correctly before starting to sew. It should not hang down from the foot but instead sit flush against the main body of the foot.

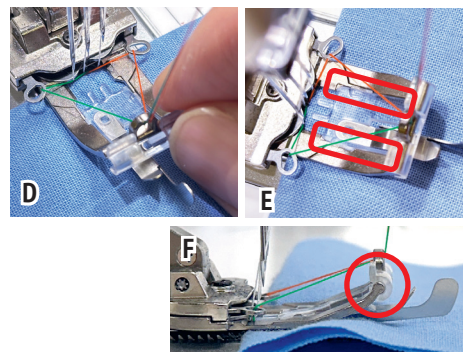

Below you will find two options for using the stitch in the ditch insert.

OPTION 1 | Triple Swing Stitch


This version works best when two pieces of fabric are sewn together with a chain stitch or a straight stitch. This allows the seam allowances on the wrong side of the fabric to be pressed apart or ironed. With the right side facing up, place the fabric under the foot so that the guide sits in the ditch of the seam. Needle C1 lies to the left of the seam, C2 on the seam line and C3 to the right of the seam.

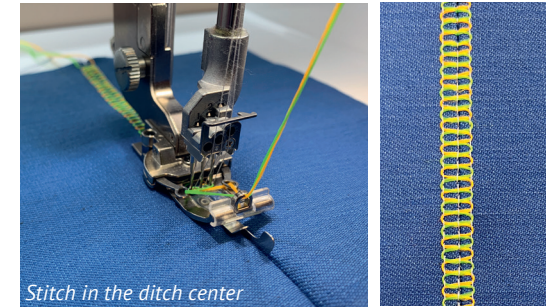

Stitch in the ditch center

OPTION 2 | Decorative Side Stitch

To create a decorative stitch parallel to your seam line, the left or right stitch in the ditch insert will keep your stitching precise. Place your seam under the presser foot, with the right side facing up and your chosen stitch in the ditch insert already attached. Place the fabric so that the guide sits in the ditch of your seam. As you sew, the guide will move through the seam ditch, creating your perfectly aligned stitch. We recommend using a wide decorative stitch with either two or three needles for best results for all fabrics.

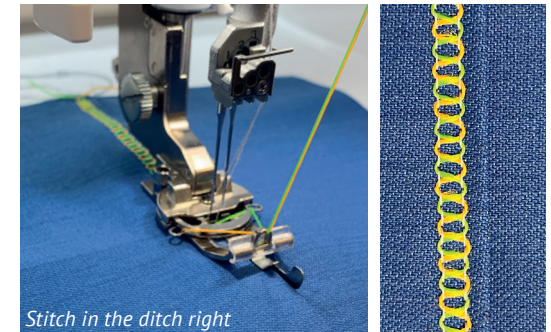

Stitch in the ditch right

Before starting your stitch, ensure your threads are to the back of the foot to avoid accidental tangles.

TIP: When working with stretch fabrics, test your stitch length first to ensure the best results. A shorter stitch length may be helpful on stretch fabrics.